



Kart-Crazy.co.uk Lap Timer Sensor Instructions.

1. The sensor must be positioned on the kart floor pan, ensuring it is as far away as possible from ferrous (steel, iron) materials. Thus place it as far as possible away from the chassis tubes, steering column etc.
2. The sensor should be attached so the lead, or socket, is facing the rear of the kart.
3. Before attaching the sensor using the sticky pad make sure the area it will be stuck to is 100% clean.
4. Once the area is cleaned remove the sticky pad backing tape and firmly press the sensor to the floor pan, and hold for at least 20 seconds.
5. We recommend a cable tie is also place around the sensor to secure it.
6. **Do not** attach with screws or bolts, this is likely to result in the lug breaking.